



Step 1: You need to connect the battery pack to the power supply, connect to the BMS through the mobile phone, and confirm that the BMS can be used normally.

Step 2: Remove the Bluetooth module on the BMS, replace it with the USB to UART data cable we sent you, connect one end to the UART interface on the BMS, and connect the other end to the UBS interface of the computer.

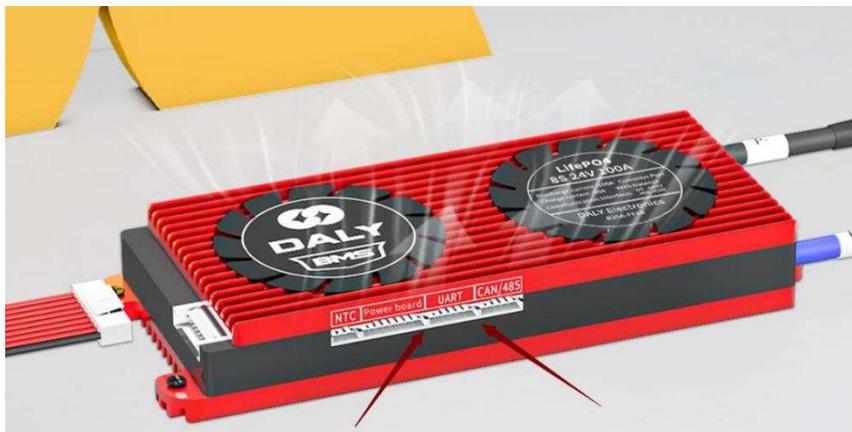

Step 3: Unzip the file package we sent to you, then open the PCMaster file, then click to open, then you need to send us the screenshot of the "Readparan" interface, and then we will provide the software for you to upgrade.

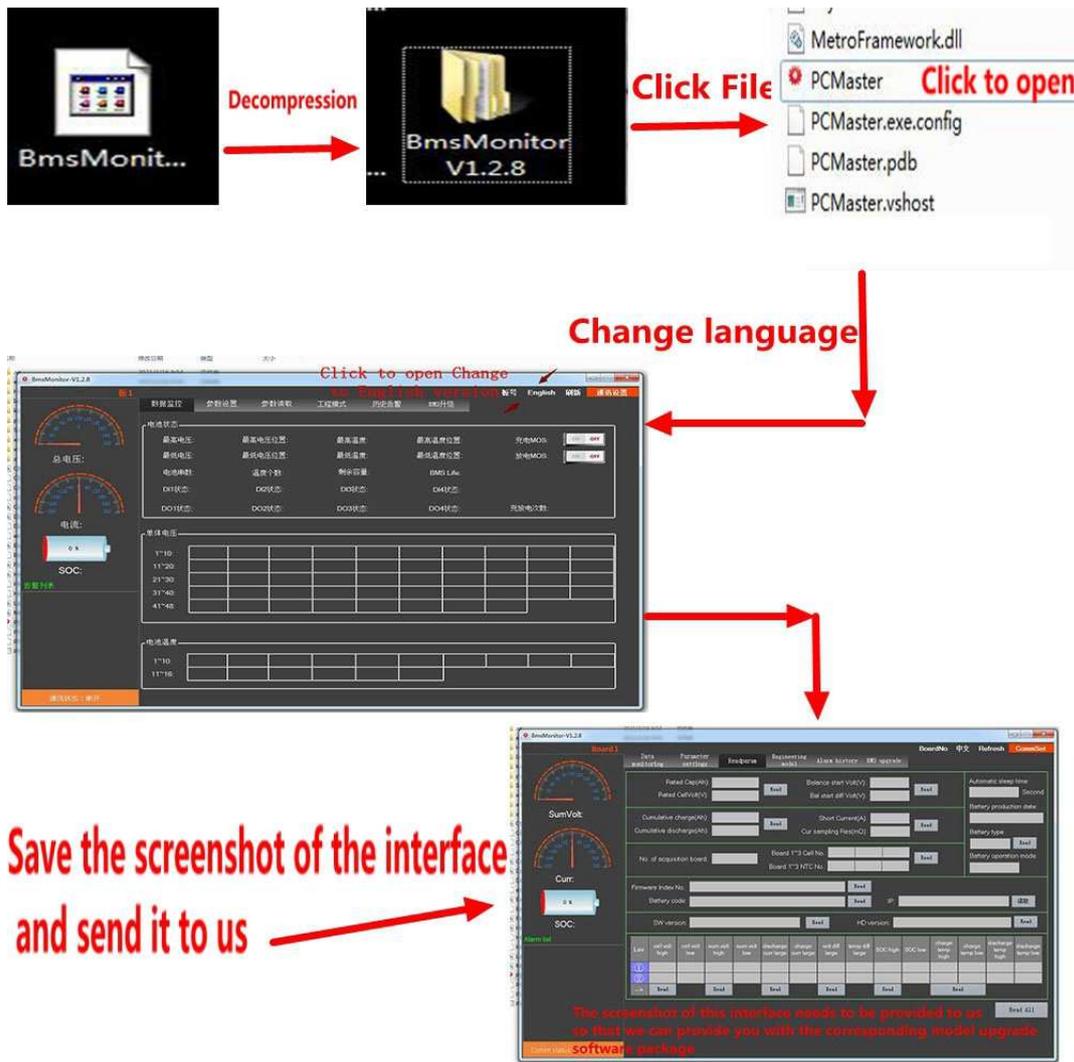

Step 4: When you receive the software compression package we sent to you again, decompress the computer desktop

Step 5: Find BMS upgrade in PCMaster, open Open File, add the upgrade software to the desktop, and then BMS will automatically complete the upgrade.

